

## MAINTENANCE SCHEDULE

**AUTO TRAN 4X4 KUN26 ENGINE : 1KD-FTV**

**MAINTENANCE OPERATIONS: I- INSPECT/CORRECT OR REPLACE, R- REPLACE , T- TIGHTEN TO SPECIFIDE TORQUE.**

MONTHS	ODOMETER READING:										MAINTENANCE ITEMS	
	100	90	80	70	60	50	40	30	20	10		
	REPLACE EVERY 150,000 KM										TIMING BELT	
I=48			I				I				VALVE CLEARANCE	
I=12	I		I		I		I		I		DRIVE BELT	
R=12	R	R	R	R	R	R	R	R	R	R	NORMAL	ENGINE OIL
R=3	CHANGE EVERY 2,500 KM										SEVERE	
R=12	R	R	R	R	R	R	R	R	R	R	ENGINE OIL FILTER	
I=12			I				I				COOLING /HEATER SYSTEM	
I=12	I	I	I	I	I	I	I	I	I	I	ENGINE COOLANT	
	FIRST REPLACE AT 160,000 KM ,AFTER EVERY 80,000 KM											
I=12	I		I		I		I		I		EXHAUST PIPES AND MOUNTINGS	
I=12	I	I	I	I	I	I	I	I	I	I	BATTERY	
	REPLACE WHEN THE REMINDER LIGHT COMES ON OR EVERY 24 MONTHS										FUEL FILTER	
I=12 R=36	I	R	I	I	R	I	I	R	I	I	NORMAL	AIR CLEANER FILTER
I=3 R=36	INSPECT EVERY 2500 KM , REPLACE EVERY 30000 KM										SEVERE	
I=12	I	I	I	I	I	I	I	I	I	I	WATER TRAPS	
I=12	I		I		I		I		I		FUEL LINES / CONNECTIONS	
I=36			I				I				NORMAL	ATF
I=36 R=72			R				I				SEVERE	
I=12 R=48	I		R		I		R		I		NORMAL	REAR DIFFERENTIAL OIL GEAF
R=24	R		R		R		R		R		SEVERE	
I=12 R=48	I		R		I		R		I		NORMAL	FRONT DIFFERENTIAL OIL
R=24	R		R		R		R		R		SEVERE	
I=48			I				I				NORMAL	TRANSFER OIL
R=48			R				R				SEVERE	
R=6	R	R	R	R	R	R	R	R	R	R	NORMAL	PROPELLER SHAFT GREASE
R=3	R	R	R	R	R	R	R	R	R	R	SEVERE	
I=12	I		I		I		I		I		NORMAL	FRONT AND REAR SUSPENSIOI
I=6	I	I	I	I	I	I	I	I	I	I	SEVERE	
T=6	T	T	T	T	T	T	T	T	T	T	BOLTS AND NUTS ON CHASSIS AND BODY	
I=6	I	I	I	I	I	I	I	I	I	I	TIRES AND INFLATION PRESSURE	
I=6	I	I	I	I	I	I	I	I	I	I	LIGHTS,HORN,WIPERS	
I=6	I	I	I	I	I	I	I	I	I	I	BRAKE PEDAL AND PARKING BRAKE	
I=12	I		I		I		I		I		NORMAL	BRAKE LININGS AND DRUMS
I=6	I	I	I	I	I	I	I	I	I	I	SEVERE	

MONTHS	ODOMETER READING:										MAINTENANCE ITEMS	
	100	90	80	70	60	50	40	30	20	10		
	REPLACE EVERY 150,000 KM										TIMING BELT	
I=48			I				I				VALVE CLEARANCE	
I=12	I		I		I		I		I		DRIVE BELT	
R=12	R	R	R	R	R	R	R	R	R	R	NORMAL	ENGINE OIL
R=3	CHANGE EVERY 2,500 KM										SEVERE	
I=6	I	I	I	I	I	I	I	I	I	I	BRAKE PADS AND DISCS	
I=6 R=24	I	I	R	I	I	I	R	I	I	I	BRAKE FLUID	
I=12	I		I		I		I		I		NORMAL	BRAKE PIPES AND HOSES
I=6	I	I	I	I	I	I	I	I	I	I	SEVERE	
I=6	I	I	I	I	I	I	I	I	I	I	POWER STEERING FLUID	
I=6	I	I	I	I	I	I	I	I	I	I	STEERING WHEEL, LINKAGE	






























































